



# ASSEMBLY INSTRUCTIONS

Airi Benches

**AE2680LF** - Airi Leaf Contour Bench

**AE2680STX**- Airi Stix Contour Bench

anovafurnishings.com  
888.535.5005 tel

**TOOLS NEEDED:**

- 1/4" Allen wrench




Airi Leaf Contour Bench




Airi Stix Contour Bench

**BENCH COMPONENTS:**

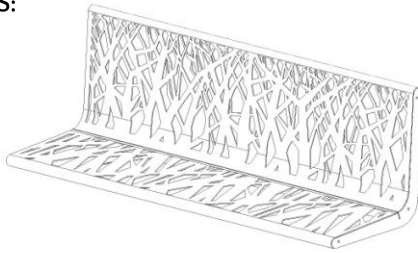


(1) Contour Seat  
(pattern may vary)

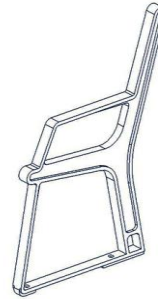


(2) End Castings

 **ASSEMBLY HARDWARE:** All hardware is stainless steel.



 (6) 5/16"-18 x 3/4"  
Socket Head Cap Screws



(6) 5/16" Flat Washers


**ASSEMBLY:**

The assembly is a two-person operation.

1. Inspect the shipping container contents for damage and to determine that all components and hardware are present.
2. Assemble the table over the shipping packaging or padded work area to avoid scratching the product.

**NOTE:** Before assembling with the screws, it is recommended that a light oil or petroleum jelly be applied to the screw threads.

3. Locate the end castings and the contour seat and place them on the work surface as shown.

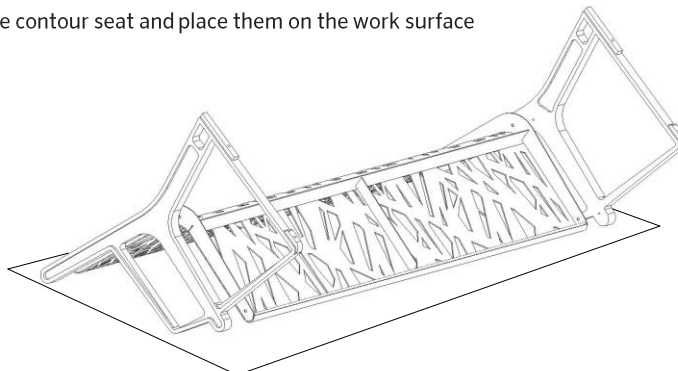


4. Mount the contour seat to the end casting by inserting three 5/16"-18 x 3/4" socket head cap screws and three 5/16" flat washers through the mounting holes.


Repeat this step for the opposite side.

After all hardware is installed, tighten with a 1/4" Allen wrench.

5. Position the bench upright and move to the location where it will be used.

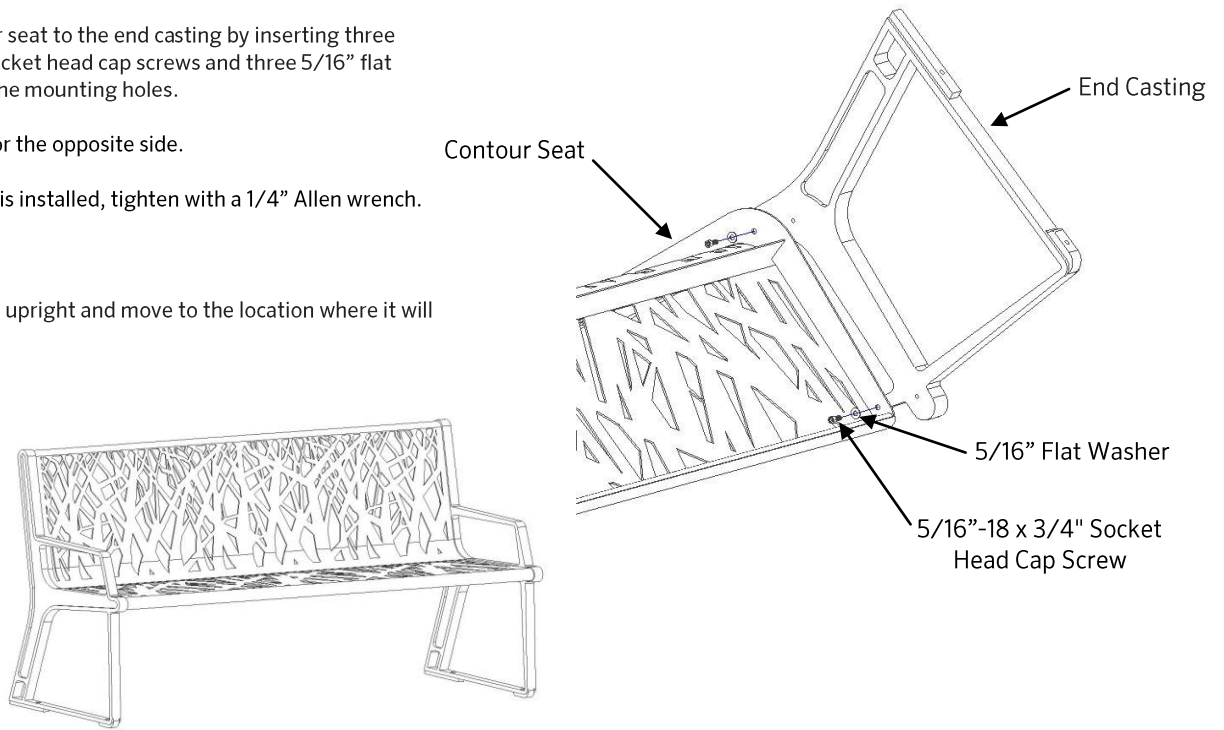

6. After two weeks, retighten all of the hardware.

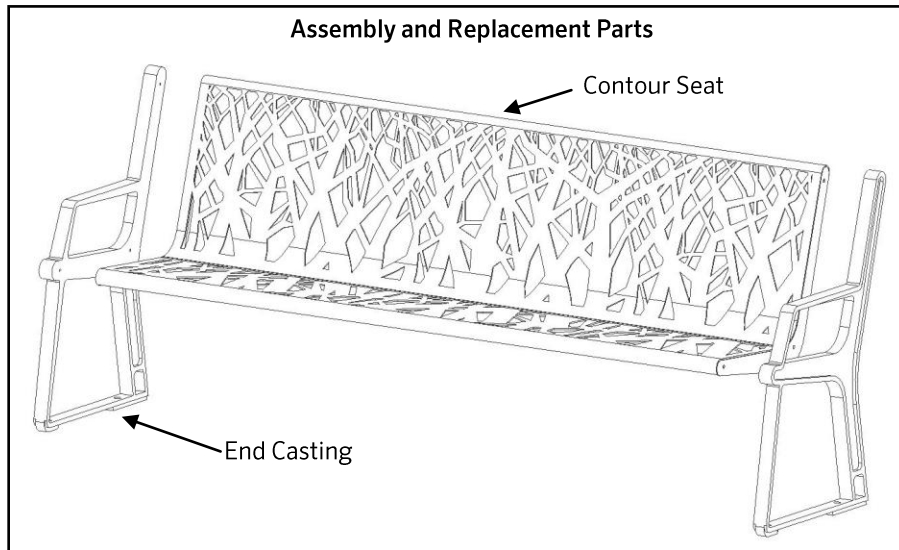

**NOTE:** Please contact Customer Care at 1-866-797-1761 when ordering replacement parts.



**WARNING**

- Furniture must not be used other than for its intended purpose and should be inspected regularly for loose, missing, or broken hardware, and general instability.
- Furniture that is damaged or appears to be unstable must be removed from service and be repaired or replaced.
- Repairs must be made using only factory authorized parts and methods.

**CARE AND MAINTENANCE**

- Do not drag the assembled unit across any surface.
- This product requires only periodic cleaning with a sponge and a solution of mild detergent and water to remove surface dirt. Do not clean with a solvent or petroleum based products.