 


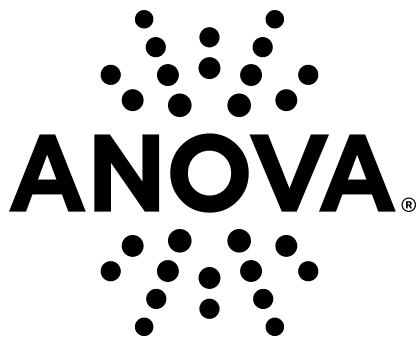


anovafurnishings.com
800.231.1327

Installation Instructions



RLA30 - Vibe Bike Rack



 TOOLS NEEDED:

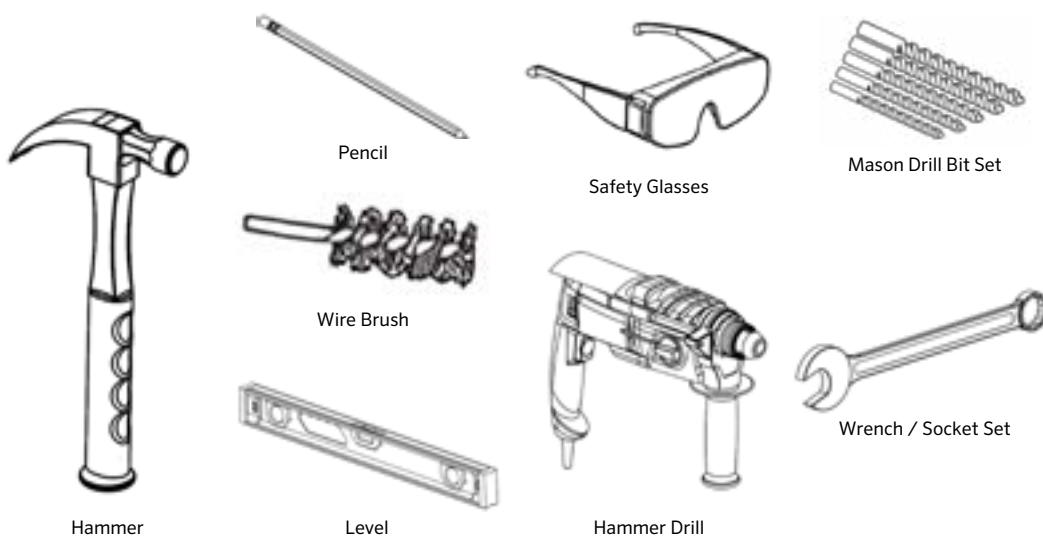

HARDWARE NEEDED:

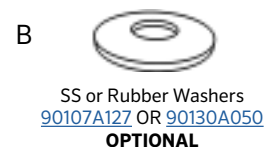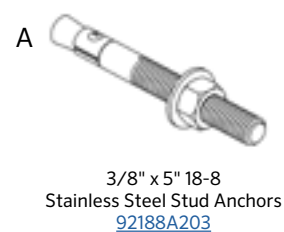

Step -by-Step Installation Sequence


Some products may require assembly before or during installation; please consult the assembly instructions if applicable.


Examine the footing or slab for damage or defects. The footing or slab should be reinforced concrete rated at a 3,000 psi minimum and be cured for at least 28 days prior to the installation of the bench.



CAUTION: Oversized holes and holes drilled too deep in the concrete will make it difficult to set the anchor.

1. Place the product in the desired location. Mark the location of the holes with a pencil. To verify the alignment of your anchor markings, reference the foot mount sheet at the back of these instructions.





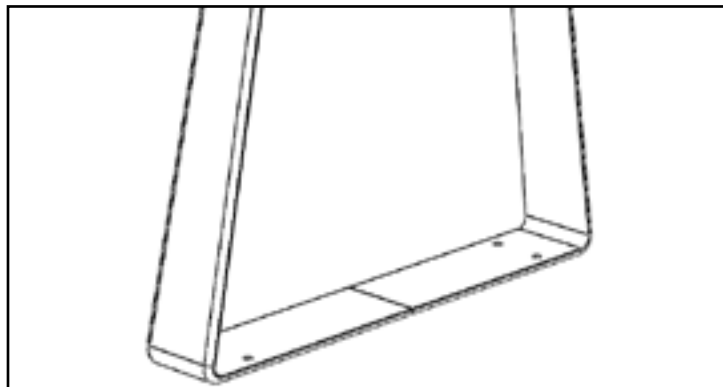


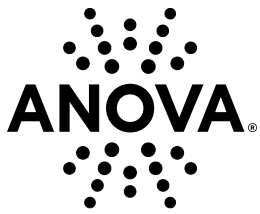


Installation Instructions

RLA30 - Vibe Bike Rack

      2. It is recommended that you start holes in sequential order from the smaller to the larger drill bits to avoid oversized holes or holes drilled to deep.
3. Evacuate debris from the mounting holes using compressed air and a steel wire brush.
4. Locate an anchor and adjust the nut so it is flush to the top of the anchor to protect the threads from being damaged, and insert into the hole.
5. Use the hammer to fix the anchor into the drilled hole by giving it several hammer blows.
6. Repeat steps 2-5 until all anchors are installed.
7. Align the mounting holes of the product over the top of the anchors
8. Care should be taken to avoid rubbing the powder coating off the foot. Mount the product to the anchor using fasteners (B) and washers (C). Leave hardware finger tight until all have been installed.
9. Verify the product is level and aligned properly and tighten all hardware.

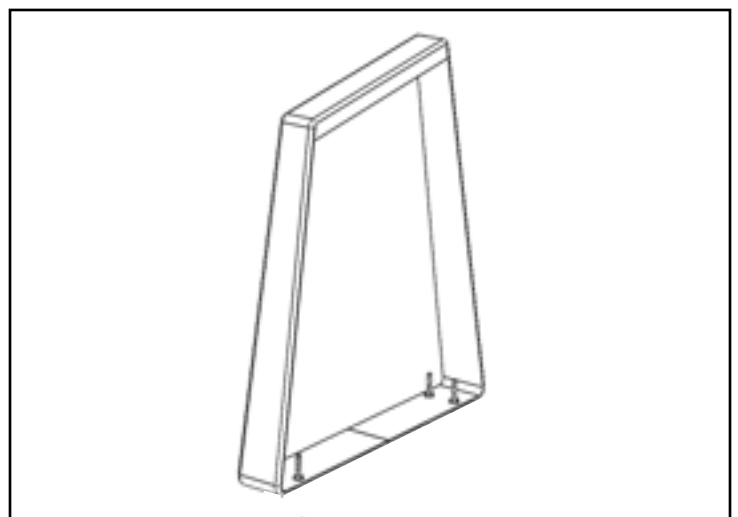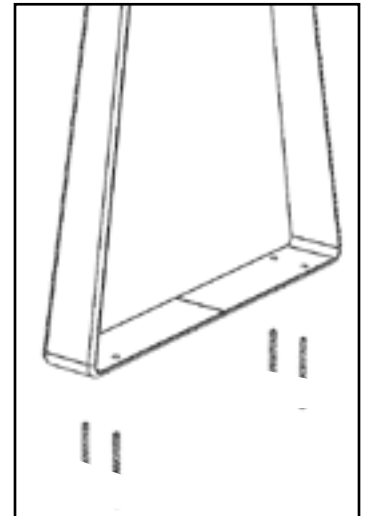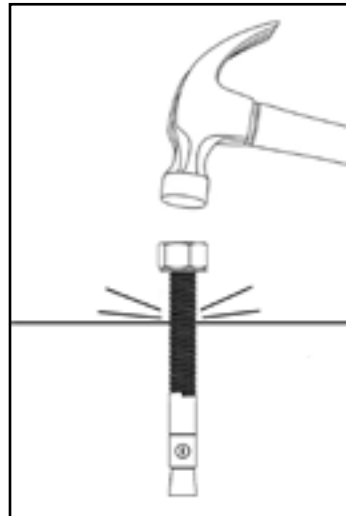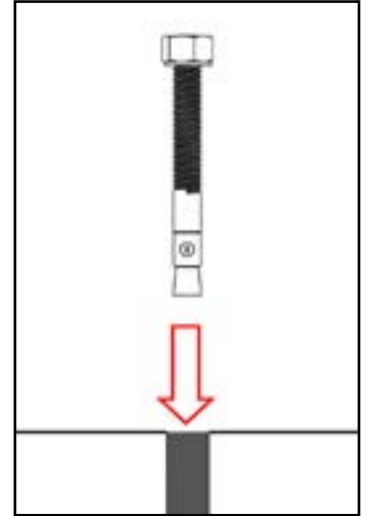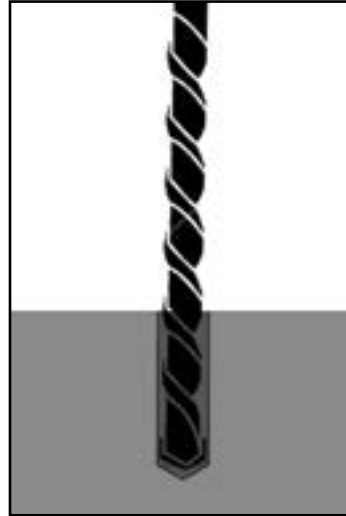


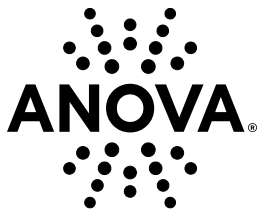

Installation Instructions

RLA30 - Vibe Bike Rack

 FOOT MOUNT(S)

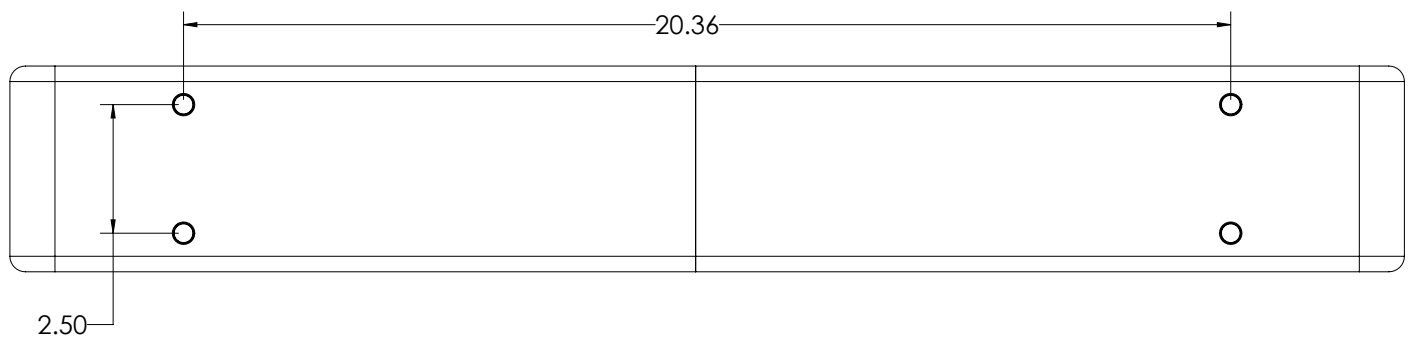

Note: Please contact Customer Care at 1-866-797-1761 when ordering replacement parts.



WARNING

- Furniture must not be used other than for its intended purpose and should be inspected regularly for loose, missing, or broken hardware, and general instability
- Furniture that is damaged or appears to be unstable must be removed from service and repaired or replaced
- Repairs must be made using only factory authorized parts and methods.

CARE AND MAINTENANCE

- Do not drag the assembled unit across any surface.
- This product requires only periodic cleaning with a sponge and a solution of mild detergent and water to remove surface dirt. Do not clean with a solvent or petroleum based products.